

Model TSTATG4273

Goodman

Air Conditioning & Heating

RESIDENTIAL

7 Day Programmable

Digital Thermostat

with Humidity Control • Multi Stage 4+2



**GREAT
FEATURES!**

Owner's Manual and Installation Instructions

Thank goodness for Goodman.™




CAUTION

Follow the Installation Instructions before proceeding. Set the thermostat mode to “OFF” prior to changing settings in setup or restoring Factory Defaults.

NOTE: Due to variations in environmental conditions, it is not always possible to achieve the desired humidification or dehumidification setpoint.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.





Glossary of Terms

- Auto-Changeover:** A mode in which the thermostat will turn on the heating or cooling based on room temperature demand.
- Cool Setpoint:** The warmest temperature that the space should rise to before cooling is turned on (without regard to deadband).
- Deadband:** The number of degrees the thermostat will wait, once a setpoint has been reached, before energizing heating or cooling.
- Dehumidify:** To reduce the amount of moisture in the air.
- Differential:** The forced temperature difference between the *heat setpoint* and the *cool setpoint*.
- Heat Setpoint:** The coolest temperature that the space should drop to before heating is turned on (without regard to deadband).
- Humidify:** To increase the amount of moisture in the air.
- Icon:** The word or symbol that appears on the thermostat display.
- Mode:** The current operating condition of the thermostat (i.e. Off, Heat, Cool, Auto, Program On).
- Non-Programmable Thermostat:** A thermostat that does not have the capability of running *Time Period Programming*.
- Programmable Thermostat:** A thermostat that has the capability of running *Time Period Programming*.
- Reheat:** Running the cooling and 2nd stage strip heaters at the same time in order to *dehumidify* the air without cooling down the room temperature.
- Temperature Swing:** *Same as Deadband.*
- Time Period Programming:** A program that allows the thermostat to automatically adjust the *heat setpoint* and/or the *cool setpoint* based on the time of the day.

Table of Contents


| | |
|---|-----------|
| Get to Know Your Thermostat | 1 |
| Quick Start | 5 |
| <u>INSTALLATION INSTRUCTIONS</u> | 7 |
| Sample Wiring Diagrams | 11 |
| Test Operation | 14 |
| <u>USER SETUP</u> | |
| Backlight Operation | 15 |
| Scrolling Display Options | 16 |
| Thermostat Display Options | 16 |
| Programming Vacation Mode | 17 |
| Emergency Heat | 17 |
| System Runtimes | 18 |
| Time Period Programming | 20 |
| <u>INSTALLER SETUP</u> | |
| Program Mode Operation | 21 |
| Timers and Deadbands | 23 |
| Programming Fan Operation | 24 |
| Comfort Recovery Operation | 24 |
| Humidification & Dehumidification | 25 |
| Dual Fuel Operation | 26 |
| Remote Sensor Operation | 27 |
| Auxiliary Output | 28 |
| Dry Contact Operation | 30 |
| Factory Defaults | 31 |
| <u>TECHNICIAN SETUP</u> | |
| Sensor Calibration | 33 |
| Equipment Testing | 33 |
| Advanced Output Testing | 33 |
| Advanced Setup Table | 34 |
| Troubleshooting | 37 |
| <u>INDEX</u> | 38 |

Get to Know Your Thermostat

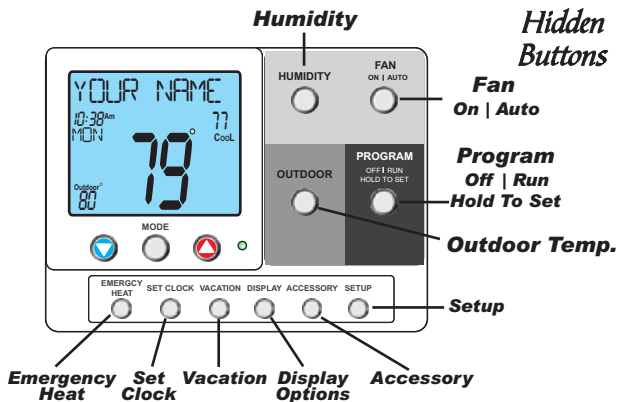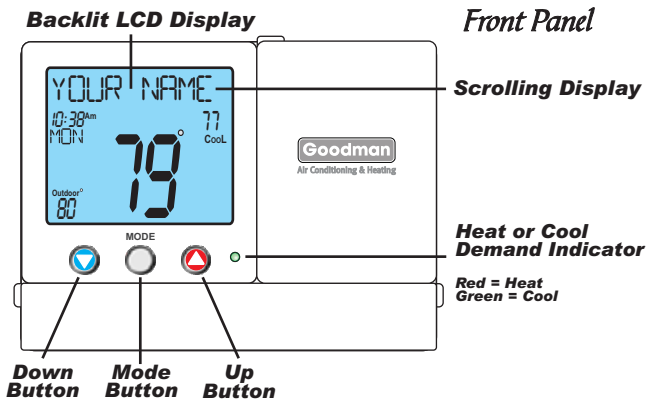

Get to Know Your Thermostat


Display Features

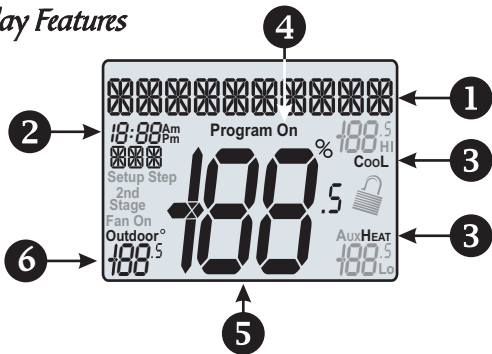


- 1** The scrolling display will be used to help you easily navigate the setup screens in the thermostat.
- 2** Clock with Day of the Week
Indicates the current time and day. This clock is also used to program the time period schedules.
- 3** Mode Indicators
Selects the operational mode of the equipment.
HEAT - Indicates the heating mode.
COOL - Indicates the air conditioning mode.
HEAT & COOL - Indicates the system will automatically change-over between heat and cool modes as the temperature varies.
OFF - Indicates heating and cooling is turned off.
- 4** Program icon
Indicates that Time Period Programming is running or is enabled to be set.
- 5** Room Temperature Display
Indicates the current room temperature and displays the outdoor temperature when selected.
- 6** Outdoor icon
Indicates the temperature displayed is from the optional outdoor sensor.

Get to Know Your Thermostat


Display Features

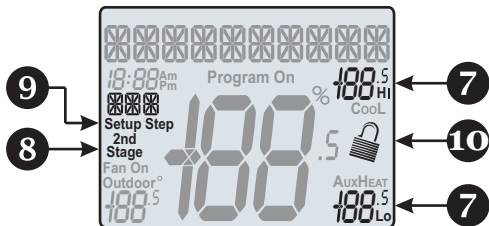

- 7** **Desired Set Temperature**
Indicates desired room temperature(s). Also displays the highest and lowest temperatures for the day.
- 8** **2nd Stage icon**
Indicates what stage of cooling or heating is currently energized.
- 9** **Setup Step icon**
Indicates the step number when the thermostat is in the setup mode.
- 10**  **icon**
Indicates the keypad has been locked.

Get to Know Your Thermostat

Display Features

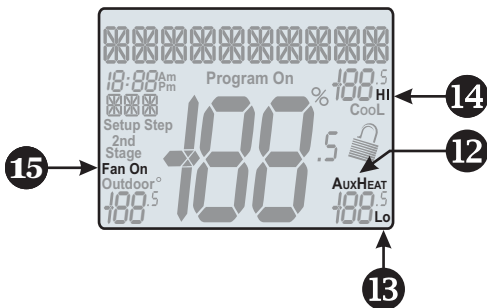

- 12** **AuxHeat** icon
Indicates 2nd stage electric strip heat is being used when the thermostat is programmed for Heat Pump operation. Only the Aux icon will appear during Cool to Dehumidify to indicate Reheat operation.
- 13** **Lo** icon
Indicates the lowest recorded outdoor temperature for the day.
- 14** **Hi** icon
Indicates the highest recorded outdoor temperature for the day.
- 15** **Fan On** icon
Indicates constant, continuous fan operation.
When **Fan On** is not lit - indicates the fan will only operate when necessary to heat or to cool.

Quick Start

During Setup and Programming:

Press the UP or Down buttons to modify the selection.

Press the MODE button to advance and confirm through the setup steps.

Setting the Clock and Day



Press the SET CLOCK button. Adjust the clock using the UP or DOWN buttons. Press MODE to advance to the day setting. Adjust the day using the UP or DOWN buttons. Press the SET CLOCK button to confirm settings.

TIP: To adjust the time by hours press and hold the FAN button while pressing the UP or DOWN buttons.

Selecting the Heat or Cool Mode

Select mode by pressing the MODE button.



Heating Only - The HEAT setting indicates the temperature the room has to reach before the furnace will turn on to heat the room.

Cooling Only - The COOL setting indicates the temperature the room has to reach before the air conditioner will turn on to cool the room.

Heating or Cooling (Auto-Changeover) - AUTO will automatically select heat or cool based on room temperature demand.

OFF - OFF indicates both heating and air conditioning systems are turned off.

Quick Start

Selecting Your Desired Temperature

AUTO-CHANGEOVER MODE - Pressing the UP or DOWN buttons in Auto or Program mode will adjust **both** the heat and cool setpoints simultaneously. To adjust heat and cool setpoints individually, choose HEAT mode to adjust the heat setpoint and COOL mode to adjust the cool setpoint, then return to AUTO mode.

HEAT OR COOL MODE - Pressing the UP or DOWN buttons in Heat or Cool mode will adjust only the heat **or** cool setpoints individually displayed.

Using the Fan Button



Fan On indicates constant fan operation.

You may turn the fan on even if the thermostat is in the OFF mode. Pressing the FAN button toggles this feature on or off.

Viewing the Outdoor and Remote Temperature Sensors

OUTDOOR TEMP - Press the OUTDOOR button to view the current outdoor temperature. The high and low temperatures for the day will also be displayed. The high and low temperatures reset at 12:00 am. Press the OUTDOOR button again to display POOL or SPA temperature sensors. Keep pressing the OUTDOOR button to return to normal operation.



Note: If no outdoor sensor is connected, 2 dashes [- -] will appear with the first button press.

REMOTE TEMP - Press the ACCESSORY button to enter the accessory setup screen. Press the UP button to view linked wireless and wired sensors and other accessories. Press the ACCESSORY button to return to the main screen.



Viewing and Setting the Indoor Humidity Sensor

IMPORTANT: Allow at least 2 minutes after the thermostat is powered on for the humidity to read correctly.



Press the HUMIDITY button to display the current humidity measured at the thermostat. The room relative humidity is displayed in the top left corner. The humidification setpoint appears in the larger center display and can be adjusted using the UP or DOWN buttons. Press the MODE button to view and adjust the dehumidification setpoints. Press the HUMIDITY button again to confirm settings and return to normal operation.


Note: Due to variations in environmental conditions, it is not always possible to achieve the desired humidification or dehumidification setpoint.

Installation Instructions

Remove & Replace the Old Thermostat

To install the thermostat properly, please follow these step by step instructions. If you are unsure about any of these steps, call a qualified technician for assistance.

- Assemble tools: Flat blade screwdriver, wire cutters and wire strippers.



- Make sure your Heater/Air Conditioner is working properly before beginning installation of the thermostat.
- Carefully unpack the thermostat. Save the screws, any brackets, and instructions.
- Turn off the power to the Heating/Air Conditioning system at the main fuse panel. Most residential systems have a separate breaker for disconnecting power to the furnace.
- Remove the cover of the old thermostat. If it does not come off easily, check for screws.
- Loosen the screws holding the thermostat base or subbase to the wall and lift away.
- Disconnect the wires from the old thermostat. Tape the ends of the wires as you disconnect them, and mark them with the letter of the terminal for easy reconnection to the new thermostat.
- Keep the old thermostat for reference purposes, until your new thermostat is functioning properly.

Installation Instructions

Wire Connections


If the terminal designations on your old thermostat do not match those on the new thermostat, **refer to the chart below or the wiring diagrams that follow.**

| Wire from the old thermostat terminal marked | Function | Install on the new thermostat connector marked |
|--|-----------------------|--|
| G or F | Fan | G |
| Y1, Y or C | Cooling | Y1 |
| W1, W or H | Heating | W1/O/B |
| Rh, R, M, Vr, A | Power | R |
| C | Common | C |
| O/B | Rev. Valve | W1/O/B* |
| W2 | 2nd Stage Heat | W2 |
| Y2 | 2nd Stage Cooling | Y2 |
| W3 | 3rd Stage Heat | W3 |
| H, HUM | Humidity | HUM |
| D, DEHUM | Dehumidity | DEHUM |
| Ck1 | Dry Contact Switch | DRY CONTACT |
| CKGND | Dry Contact Switch | DRY CONTACT |
| OUT - | Remote/Outdoor Sensor | REMOTE/ OUTDOOR |
| OUT + | Remote/Outdoor Sensor | REMOTE/ OUTDOOR |
| AUX | Auxiliary Output | AUX |
| L, Fault | Fault Input | FAULT |

* O/B is used if your system is a Heat Pump.

Installation Instructions

The TSTATG4273 Thermostat Backplate

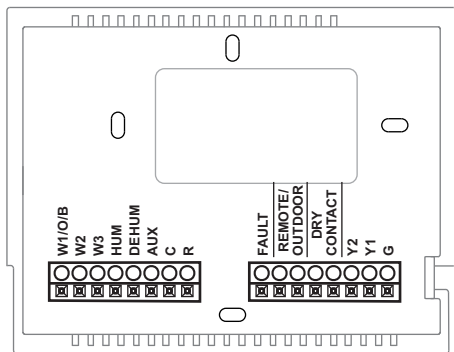

| | |
|---------------|--------------------------------|
| W1/O/B | 1st stage heat/reversing valve |
| W2 | 2nd stage heat circuit |
| W3 | 3rd stage heat circuit |
| HUM | Humidifier control circuit |
| DEHUM | Dehumidifier control circuit |
| AUX | Aux output |
| C | 24 VAC common |
| R | 24 VAC Return |


| | |
|----------------------------|--------------------------------------|
| FAULT | Fault Input |
| REMOTE/ OUTDOOR | Remote/Outdoor sensor connections |
| DRY CONTACT | Dry Contact connections |
| Y2 | 2nd stage compressor |
| Y1 | 1st stage compressor |
| G | Fan relay |

IMPORTANT: This thermostat requires both R (24 VAC Return) and C (24 VAC Common) be connected to the backplate terminals.

Installation Instructions

Explanation of Thermostat Jumpers

Jumpers are located on the back of the thermostat

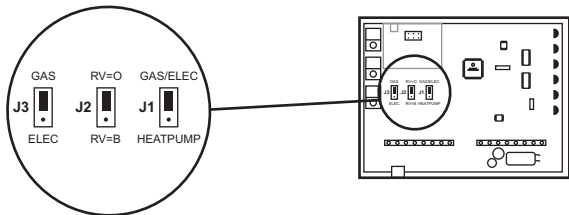

This jumper configures the thermostat to control a conventional gas/electric system or a heat pump. If your system is anything other than a heat pump, leave this jumper set for GAS/ELEC.*

**For some commercial heat pumps, this jumper will need to be set for GAS/ELEC. Consult the commercial heat pump literature.*



When J1 is configured to control a heat pump, this jumper (J2) must be set to control the appropriate reversing valve. If RV=O is chosen, the W1/O/B terminal will energize in cooling. If RV=B is chosen, the W1/O/B terminal will energize in heating.



When J1 is set for GAS/ELEC:

This jumper (J3) controls how the thermostat will control the Fan (G) terminal in heating mode. When **GAS** is chosen, the thermostat will not energize the Fan (G) terminal in heating. When **ELEC** is chosen the thermostat will energize the fan in heating.

When J1 is set for HEATPUMP:

This jumper (J3) defines the Aux Heat type. When **GAS** is chosen, the auxiliary heat will not be allowed to run during heat pump operation. When using a Dual Fuel system, set this jumper for **GAS**. When **ELEC** is chosen, up to two stages of auxiliary strip heat will be allowed to run.

Installation Instructions

Sample Wiring Diagrams

Conventional Heating and Cooling Systems

3 Wire, Heat Only

Residential & Commercial 1 Stage Heating with no Fan.

R 24VAC Power
C 24VAC Common
W1/O/B 1st Stage Heat

J1 = Gas/Elec
J2 = O (not used)
J3 = Gas

4 Wire, Cool Only

Residential & Commercial 1 Stage Cooling.

R 24VAC Power
C 24VAC Common
Y1 1st Stage Cool
G Fan

J1 = Gas/Elec
J2 = O (not used)
J3 = Gas

5 Wire, 1 Stage Cooling, 1 Stage Heat

Residential & Commercial 1 Stage Cooling, with 1 stage Gas Heat.

R 24VAC Power
C 24VAC Common
W1/O/B 1st Stage Heat
Y1 1st Stage Cool
G Fan

J1 = Gas/Elec
J2 = O (not used)
J3 = Gas

5 Wire, 1 Stage Cooling, 1 Stage Heat

Residential & Commercial 1 Stage Cooling, with 1 stage Electric Heat.

R 24VAC Power
C 24VAC Common
W1/O/B 1st Stage Heat
Y1 1st Stage Cool
G Fan

J1 = Gas/Elec
J2 = O (not used)
J3 = Electric

8 Wire, 2 Stage Cooling, 3 Stage Heat

Residential & Commercial 2 Stage Cooling, with 3 stage Gas Heat.

R 24VAC Power
C 24VAC Common
W1/O/B 1st Stage Heat
W2 2nd Stage Heat
W3 3rd Stage Heat
Y1 1st Stage Cool
Y2 2nd Stage Cool
G Fan

J1 = Gas/Elec
J2 = O (not used)
J3 = Gas

Installation Instructions

Sample Wiring Diagrams

Heat Pump Systems

5 Wire, 1 Stage Cooling, 1 Stage Heat

Residential & Commercial Heat Pump with
'O' Reversing Valve

R 24VAC Power
C 24VAC Common
W1/O/B Reversing Valve
Y1 1st Stage Compressor
 (Cool or Heat)
G Fan

J1 = Heat Pump
J2 = O
J3 = Gas

6 Wire, 1 Stage Cooling, 2 Stage Heat

Residential & Commercial Heat Pump with
'O' Reversing Valve

R 24VAC Power
C 24VAC Common
W1/O/B Reversing Valve
Y1 1st Stage Compressor
 (Cool or Heat)
W2 Aux Heat
G Fan

J1 = Heat Pump
J2 = O
J3 = Electric

7 Wire, 2 Stage Cooling, 3 Stage Heat

Residential & Commercial Heat Pump with
'O' Reversing Valve.

R 24VAC Power
C 24VAC Common
W1/O/B Reversing Valve
W2 3rd Stage Heat
Y1 1st Stage Compressor
 (Cool or Heat)
Y2 2nd Stage Compressor
 (Cool or Heat)
G Fan

J1 = Heat Pump
J2 = O
J3 = Electric

Setup Step 24 is set to 2
(Number of Compressor Stages)

8 Wire, 2 Stage Cooling, 4 Stage Heat

Residential & Commercial Heat Pump with
'O' Reversing Valve.

R 24VAC Power
C 24VAC Common
W1/O/B Reversing Valve
W2 3rd Stage Heat
W3 4th Stage Heat
Y1 1st Stage Compressor
 (Cool or Heat)
Y2 2nd Stage Compressor
 (Cool or Heat)
G Fan

J1 = Heat Pump
J2 = O
J3 = Electric

Setup Step 24 is set to 2
(Number of Compressor Stages)

Installation Instructions

Sample Wiring Diagrams


Heat Pump Systems with Dual Fuel

7 Wire, 2 Stage Cooling, 3 Stage Heat


Residential & Commercial Heat Pump with 'O' Reversing Valve and Fossil Fuel furnace.

| | | | |
|--------|--|------|---|
| R | 24VAC Power | J1 = | Heat Pump |
| C | 24VAC Common | J2 = | O |
| W1/O/B | Reversing Valve | J3 = | GAS |
| W2 | 3rd Stage Heat (connected to furnace) | | |
| Y1 | 1st Stage Compressor (Cool or Heat) | | Setup Step 24 is set to 2 (Number of Compressor Stages) |
| Y2 | 2nd Stage Compressor (Cool or Heat) | | Setup Step 51 is set to ON. (Dual Fuel On, Off, or External) |
| G | Fan | | |

Humidification or Dehumidification

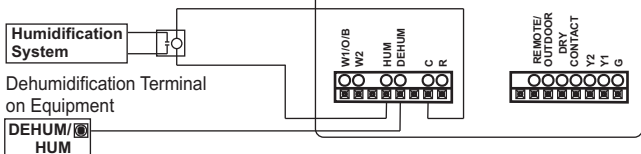

Dry Contact and Remote or Outdoor Sensor

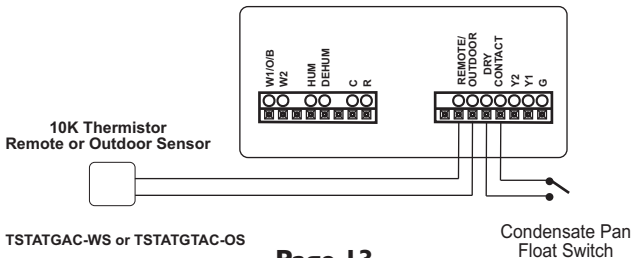

Installation Instructions: Test Operation

This thermostat has a diagnostic feature that enables testing of all outputs. This feature is contained in **Technician Setup**.

*To enter Technician Setup, press and hold the **SETUP** button for 5 seconds until all the icons appear. Follow the next steps to view settings and test equipment.*

1. Press MODE to view the version numbers of the thermostat.
2. Press MODE again to view the jumper settings and current state of the Dry Contact and Fault terminals.
3. Press MODE again and the scrolling display will read "TURN ON EQUIPMENT?" Press UP for Yes or DOWN for No.

If Yes is chosen, press UP to turn on heat or DOWN to turn on Cooling. The scrolling display will read "NOTHING ON." Next:

Press UP to turn on and cycle up through the heating stages.
Press DOWN to turn the heating stages off. Press MODE to exit.

Press DOWN to turn on and cycle down through the cooling stages.
Press UP to turn the cooling stages off. Press MODE to exit.


4. Press MODE until "CALIBRATE SENSORS?" appears on the scrolling display. Press UP for Yes or DOWN for No. Press MODE to select which sensor to calibrate. Use UP or DOWN to modify your selection.
5. Press MODE until "CONTROL HUM?" appears on the scrolling display. Press UP for On or DOWN for Off. Press MODE to continue.
6. Press MODE until "CONTROL DEHUM?" appears on the scrolling display. Press UP for On or DOWN for Off. Press MODE to continue.
7. Press MODE until "CONTROL AUX OUT?" appears on the scrolling display. Press UP for On or DOWN for Off. Press MODE to exit.

*To exit Technician Setup at any time, press the **SETUP** button. Technician Setup will automatically exit after 10 minutes if no buttons are pressed.*

User Setup: Backlight Operation

How to Change Settings in the Setup Screens

To enter Advanced Setup, press the **SETUP** button, then press **MODE**. Use the **UP** or **DOWN** buttons to adjust the value of your selection. Press **MODE** to advance to the next setup step. Press **SETUP** again to leave the setup screens.



Backlight (Setup Step 3)

The thermostat backlight may be set to be always on, on temporarily with any button press, on throughout the evening, or always off. (For always off, see Backlight Level)

Press the **SETUP** button, then press **MODE** repeatedly until the Backlight setup step appears. Use the **UP** or **DOWN** buttons to make selection. Press **MODE** to advance to the next step. Press **SETUP** to leave the setup screens.

Backlight Off - Backlight turns on with any button press and turns off after 8 seconds.

Backlight On - Backlight is on continuously.

Backlight 6pm to 6am - Backlight turns on at 6pm and turns off at 6am.

Backlight Level (Setup Step 4)

The backlight can be adjusted between always off and seven levels of brightness.

Press the **SETUP** button, then press **MODE** repeatedly until the Backlight setup step appears. Use the **UP** or **DOWN** buttons to adjust the brightness. Press **MODE** to advance to the next step. Press **SETUP** to leave the setup screens.

Language (Setup Step 16)


Setup step instructions on the scrolling display can be set for English, Spanish, or French.

Press the **SETUP** button, then press **MODE** repeatedly until the Language setup step appears. Use the **UP** or **DOWN** buttons to make selection. Press **MODE** to advance to the next step. Press **SETUP** to leave the setup screens.

User Setup: Scrolling Screen and Display Options

Scrolling Display Method (Setup Step 17)


This option allows the user to choose how the scrolling text is displayed. Options are:



Press the **SETUP** button, then press **MODE** repeatedly until the Scrolling Method setup step appears. Use the **UP** or **DOWN** buttons to make a selection. Press **MODE** to advance to the next step. Press **SETUP** to leave the setup screens.



Example of “Whole Words Centered”:

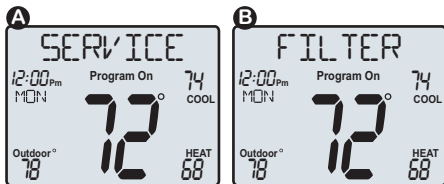


Display

This option allows the user to “de-clutter” the thermostat display screen by removing icons from the main display. The room temperature will always be shown. Service information may also be viewed by pressing and holding the **DISPLAY** button.

Each press of the **DISPLAY** button will remove icons. Keep pressing **DISPLAY** to make icons reappear.

Press and hold **DISPLAY** for 5 seconds to view a name and phone number to call for service.

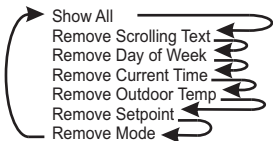

Any removed icons will be displayed temporarily when a setting change is made.

User Setup

Vacation



The Vacation feature allows the thermostat to use temporary, energy saving setpoints without having to change regular programming.

Press the VACATION button to enter Vacation programming. Use the UP and DOWN buttons to choose the number of days desired to run the Vacation feature. To confirm your settings and advance to the next step, press the VACATION button again.

Choose the desired Vacation Cool setpoint. Press VACATION. Choose the desired Vacation Heat setpoint. Press VACATION again to return to the main screen.

When the thermostat is programmed for Vacation mode, and it is in the Program On mode, it will take effect at 12:00 am of the next day. To turn off Vacation mode, set the number of days to 0.

Emergency Heat



The Emergency Heat function is only available if your thermostat is set to control a Heat Pump.

To initiate the Emergency Heat feature, **Press and hold the EMERGENCY HEAT button for 2 seconds.** During Emergency Heat operation the thermostat will turn on the fan and auxiliary stages of heat when there is a demand for heat. The 1st stage of heating and all stages of cooling will be unavailable. To exit Emergency Heat, press the EMERGENCY HEAT button.

Accessory



The optional RF Module must be installed to link and view wireless accessories.



The ACCESSORY button allows the user to view wired and wireless sensors and "link" these and other wireless devices to the thermostat via an optional RF module. Press the ACCESSORY button to enter the Accessory setup screen. Press UP to view linked and wired accessories. Follow the instructions included with the wireless accessory to begin linking process. Next, press DOWN to enter the wireless linking mode. Press MODE to initiate linking. Press ACCESSORY to return to the main screen. **NOTE:** A wired outdoor sensor's temperature reading is updated once every minute; a wireless outdoor sensor's temperature reading is updated once every 5 minutes.

User Setup: System Runtimes

These setup steps allow the user to monitor equipment runtimes and program service alerts.

Runtime hours or days appear in the clock display.



Service Filter Runtime (Setup Steps 5-6, 12-13)

Press the SETUP button, then press MODE repeatedly until the desired setup step appears. Use the UP or DOWN buttons to make a selection. Press MODE to advance to the next step. Press SETUP to leave the setup screens.



Current Service Filter Runtime Hours (Setup Step 5) - This counter keeps track of the number of hours of fan runtime in the Heating mode, Cooling mode, and in stand alone Fan operation. Press FAN to reset.

Current Service Filter Calendar Days (Setup Step 6) - This counter displays the total number of calendar days that have elapsed since the counter was reset to help the user track Fan runtime. Press FAN to reset.

Set Service Filter Runtime Hours (Setup Step 12) - This timer allows the user to specify the number of hours the fan will run before the "Replace Filter" alert will be displayed. Press DOWN continuously until OFF is displayed to disable this alert.

Set Service Filter Calendar Days (Setup Step 13) - This timer allows the user to specify the number of calendar days that will elapse before the "Replace Filter" alert will be displayed. Press DOWN continuously until OFF is displayed to disable this feature.

User Setup: System Runtimes

To view, set, or reset System Runtimes, press the **SETUP** button, then press **MODE**. Press **MODE** to advance to the desired setup step. Use the **UP** or **DOWN** buttons to adjust the value of your selection. Press **SETUP** again to leave the setup screens.

Heating and Cooling System Runtime - Energy Watch (Setup Steps 7 -9)

Current Heat Runtime Hours (Setup Step 7) - This counter keeps track of the number of hours the system has run in Heating. Press **FAN** to reset.

Current Aux Strip Heat Runtime Hours (Setup Step 8) - This counter keeps track of the number of hours the system has run in Auxiliary Heating. This setup step is only available when the thermostat jumpers are configured for Heat Pump and Electric Heat. Press **FAN** to reset.

Current Cool Runtime Hours (Setup Step 9) - This counter displays the number of hours the system has run in Cooling. Press **FAN** to reset.

UV Lamp Runtime (Setup Steps 10, 14)

Current UV Lamp Calendar Days (Setup Step 10) - This counter displays the total number of calendar days that have elapsed to help the user track UV lamp runtime. Press **FAN** to reset.

Set UV Lamp Calendar Days (Setup Step 14) - This timer allows the user to specify the number of calendar days the UV Lamp will operate before the "Replace UV Lamp" alert will be displayed. Press **DOWN** continuously until **OFF** appears to disable this alert.

Humidifier Runtime (Setup Steps 11, 15)

Current Humidifier Calendar Days (Setup Step 11) - This counter displays the total number of calendar days that have elapsed to help the user track the Humidifier runtime. Press **FAN** to reset.

Set Humidifier Calendar Days (Setup Step 15) - This timer allows the user to specify the number of calendar days the Humidifier will run before the "Service Humidifier" alert will be displayed. Press **DOWN** continuously until **OFF** appears to disable this alert.

User Setup: Time Period Programming


To enter Time Period Programming screens, Press and hold PROGRAM until the scrolling prompt appears.



OFF - Time Period Program is off.

RUN - Time Period Program is running.

HOLD TO SET - Press and hold PROGRAM to make Time Period Programming changes.



Programming a Daily Schedule

Select Day of Week to program - Press the UP or DOWN buttons to choose the day of the week to be programmed. Press Mode to advance to the next step.



This thermostat features four programmable time periods per 24 hour day: Morning, Day, Evening, and Night. The start time for each time period is adjustable. The stop time for each time period is the start time for the next.

Select Morning Start Time - Press the UP or DOWN buttons to adjust the time of day desired. Press MODE to advance to the next step.

Select Morning Cool Setpoint - Press the UP or DOWN buttons to adjust the cool setpoint desired. Press MODE to advance to the next step.

Select Morning Heat Setpoint - Press the UP or DOWN buttons to adjust the heat setpoint desired. Press MODE to advance to the next step.

Repeat Start Time and Setpoint programming for Day, Evening, and Night.

Copy Current Day to Next - Press the UP button to Copy the current day's program to another day. Press the UP or DOWN buttons to choose which day to copy to. Press MODE to confirm. Continue to press MODE to copy to more days. Press the DOWN button to program another day with a different schedule.


Program Another Day - Press the DOWN button to choose to program another day with a different schedule. Press MODE. Press the UP or DOWN buttons to choose the desired day. Press MODE to advance to the next step.

Press the PROGRAM Button to exit Time Period Programming

Installer Setup

How to Change Settings in the Setup Screens

To enter Advanced Setup, press the **SETUP** button, then press **MODE**. Use the **UP** or **DOWN** buttons to adjust the value of your selection. Press **MODE** to advance to the next setup step. Press **SETUP** again to leave the setup screens.



Selecting Your Program Mode (Setup Step 1)

This thermostat may be configured to be programmable or non-programmable.

7 Day Program - Allows all seven days to be programmed independently.

Non Program - No advanced time period programming available.

1 Day Program - Allows one 24 hour day to be programmed. This same schedule will be repeated everyday the program is set to run.

5/2 Day Program - Allows weekdays and weekends to be programmed independently.

Selecting Your Available Modes (Setup Step 2)

Auto-Changeover - Allows the thermostat to turn on heating or cooling based on room temperature demand. Also allows the manual selection of HEAT only or COOL only and OFF.

Heat and Cool - Allows the thermostat to turn on heating or cooling depending on which one has been manually selected. Auto-Changeover is not available when this is selected.

Heat Only - Allows the thermostat to only turn on HEAT or OFF modes.

Cool Only - Allows the thermostat to only turn on COOL or OFF modes.

Installer Setup

Setpoint Limits (Setup Step 18)

When this feature is set to ON, the heat and cool setpoints can be restricted to preset levels, set in steps 19 and 20.

Maximum Heat Setpoint (Setup Step 19) - (35° - 99°).

Minimum Cool Setpoint (Setup Step 20) - (35° - 99°).

Cycles Per Hour (Setup Step 21)

The Cycles Per Hour setting may limit the number of times per hour your HVAC unit may energize. For example, at a setting of 6 cycles per hour the HVAC unit will only be allowed to energize once every 10 minutes. The Cycles Per Hour limit may be overridden and reset by pressing the UP or DOWN buttons on the thermostat. Settings are No Limit, 2, 3, 4, 5, or 6.

Compressor Minimum Off Minutes (Setup Step 22)

This feature allows the user to set a minimum off time for the compressor. Settings are 5 mins., 3 mins., or 0 mins.

Minimum Heat/Cool Setpoint Difference (Setup Step 23)

This feature allows the user to set the minimum gap between Heat and Cool setpoints in **AUTO** mode. Select from 0 to 6. If setup step 2 is not set for **AUTO-CHANGEOVER**, this step will not appear.

Number of Compressor Stages (Setup Step 24)

This feature is for heat pump applications only.

This feature allows the thermostat to control 1 or 2 compressor stages when configured for heat pump. **NOTE: When step 51 (Dual Fuel) is set to ON or EXTERNAL, this step will not appear and Compressor Stages will automatically be set to 2.**

Installer Setup

Deadband Settings (Setup Steps 25 - 34)

The Deadband is the number of degrees or minutes that the thermostat waits before it initiates the stages of heating or cooling.

1st Stage Deadband (Setup Step 25) - Specifies the minimum temperature difference between the room temperature and the desired setpoint before the first stage of heating or cooling is allowed to turn on. (1 - 6 degrees) For example, if the heat setpoint is 68 and the 1st Stage deadband is set to 2 degrees, the room temperature will need to reach **66 degrees** before the heat turns on.

2nd Stage Deadband (Setup Step 26) - Specifies the additional minimum temperature difference after the first stage turns on before the second stage is activated. (0° - 10°)

3rd Stage Deadband (Setup Step 27) - Specifies the additional minimum temperature difference after the second stage turns on before the third stage is activated. (0° - 10°)

4th Stage Deadband (Setup Step 28) - (Two Stage heat pump only) - Specifies the additional minimum temperature difference after the third stage turns on before the final stage of strip heat is activated. (0° - 10°)

Minutes Between 1st and 2nd Stage (Setup Step 29) - Specifies the *minimum* time (in minutes) after the first stage turns on before the second stage can turn on. (0 - 60)

Minutes Between 2nd and 3rd Stage (Setup Step 30) - Specifies the *minimum* time (in minutes) after the second stage turns on before the third stage can turn on. (0 - 60)

Delay Between 3rd and 4th Stage (Setup Step 31) - Specifies the *minimum* time (in minutes) after the third stage turns on before the final stage can turn on. (0 - 60)

Second Stage on Until Deadband (Setup Step 32) - Specifies whether second stage will turn off at first stage deadband or remain on until the room temperature demand is satisfied. Choose between Deadband or Setpoint.

Third Stage on Until Deadband (Setup Step 33) - Specifies whether third stage will turn off at second stage deadband or remain on until the room temperature demand is satisfied. Choose between Deadband or Setpoint.

Fourth Stage on Until Deadband (Setup Step 34) - Specifies whether fourth stage will turn off at third stage deadband or remain on until the room temperature demand is satisfied. Choose between Deadband or Setpoint.

Installer Setup

Programming the Fan (Setup Steps 35 - 38)

Fan Program (Setup Step 35) - This feature allows the fan to be programmed to turn on automatically for a specified period during the day. If this feature is set to ON, the next three steps will appear.

Minutes Of Fan Runtime Per Hour (Setup Step 36) - This setting specifies the number of minutes (0 - 60, in increments of 5) that the fan will run at the top of each hour.

Fan Program Start Time (Setup Step 37) - This setting specifies the hour of each day when the programmable fan feature will start.

Fan Program Stop Time (Setup Step 38) - This setting specifies the hour of each day when the programmable fan feature will stop. **NOTE:** Setting the Stop Hour equal to the Start Hour will cause the fan to run 24 hours a day.

Fan Off Delay in Seconds (Setup Step 56)

This feature allows the user to increase the cooling or electric strip heating efficiency of the system. The thermostat may be programmed to continue running the fan after a call for cooling or electric strip heating has been satisfied. This delay can be set for 0, 30, 60, 90, or 120 seconds. If set to 0, the fan will not run after a call for cooling or electric strip heating has been satisfied.

Fahrenheit or Celsius (setup step 57)

This feature allows the thermostat to display temperature in Fahrenheit or Celsius.

Comfort Recovery (setup step 70)

Comfort Recovery turns on the heat before the Morning start time to bring the room temperature to the Morning setpoint at the start of the Morning time period. Please allow 4-8 days for Comfort Recovery time to adjust. When used with a heat pump, electric strip heat will be disabled while Comfort Recovery is active.

Installer Setup

Humidity and Dehumidity (Setup Steps 41 -46, 74-75)

Humidity Only With Heat (Setup Step 41) - When this step is set to ON, Humidity will not run without a demand for Heat.

Fan With Humidity Demand (Setup Step 42) - Specifies if the fan should be turned on with a demand for Humidity. (This step will only appear if step 41 is set to OFF.)

Cool To Dehumidify (Setup Step 44) - Specifies if the cooling equipment is allowed to turn on exclusively to lower room humidity. (If set to OFF the following two steps will not appear.)

Max Dehum Overcool (Setup Step 45) - Specifies how many degrees below the Cool setpoint the air conditioning will run to satisfy a Cool to Dehumidify demand. (0° - 5°)

Reheat Operation With Cool To Dehumidify (Setup Step 46) - Specifies if electric strip heat is allowed to turn on during a Cool to Dehumidify demand to help maintain desired room temperature. This step is not available if Electric Heat is not present.

HUM Output Polarity (Setup Step 74)

Open (Normally Open) means no voltage is sent to the HUM output when there is no demand for humidity.

Closed (Normally Closed) means voltage is sent to the HUM output when there is no demand for humidity.

DEHUM Output Polarity (Setup Step 75)

Open (Normally Open) means no voltage is sent to the DEHUM output when there is no demand to dehumidify.

Closed (Normally Closed) means voltage is sent to the DEHUM output when there is no demand to dehumidify.

Installer Setup

Lockout Heat Pump On Outdoor Temp (Setup Steps 47 - 48)

This feature stops the heat pump from running below a specified outdoor temperature, where the heat pump has become inefficient or could damage equipment.


Lockout Heat Pump With Outdoor Temp (Setup Step 47) - When set to ON, the Heat Pump Lockout feature is enabled. When set to OFF, the heat pump will stage normally.

Heat Pump Lockout Temp (Setup Step 48) - (0° - 75°) This step allows the user to set the temperature at which the heat pump will be locked out. Adjustable from 0 to 75 degrees Fahrenheit in five degree increments.

Auxiliary Heat Lockout (Setup Steps 49 - 50)

This feature allows the auxiliary heat for a heat pump (W2 and W3) to be locked out above a specific outdoor temperature. These steps will only appear if the thermostat jumper **J1** is set for **Heat Pump** and **J3** is set for **Electric Heat**.

Jumpers are located on the back of the thermostat




Lockout Aux Heat With Outdoor Temp (Setup Step 49) - When set to ON, the Aux Heat Lockout feature is enabled. When set to OFF, Auxiliary Heat will stage normally.

Aux Heat Lockout Temp (Setup Step 50) - (20° - 75°) This step allows the user to set the temperature at which Auxiliary Heat will be locked out. Adjustable from 20 to 75 degrees Fahrenheit. **NOTE:** This temperature setting cannot be lower than 5 degrees above the Heat Pump Lockout temperature.

Dual Fuel (Setup Steps 51 - 55)

This feature is for heat pump applications only. Steps 51 - 55 will only appear if the thermostat jumper **J1** is set for **Heat Pump** and **J3** is set for **Gas Heat**.

Jumpers are located on the back of the thermostat



Dual Fuel On, Off (Setup Step 51) - On - Tells the thermostat an outdoor temperature or a demand for third stage heat will be used to stop running the heat pump and only run a fossil fuel source of heat. **NOTE:** Once the change to fossil fuel is made, the heat demand must finish with fossil fuel. Additional heat demands within 10 minutes will also use fossil fuel, regardless of outdoor temperature.

CAUTION - If an external fossil fuel kit is already installed on your system, leave Dual Fuel (Setup Step 51) set to OFF.

Installer Setup

Dual Fuel (Cont.) Setup steps 53-55 will only appear if step 50 is set to ON.

Dual Fuel Changeover on Outdoor Temp (Setup Step 53) - ON, the change from Heat Pump to a fossil fuel source of heat will be based on outdoor temperature. **OFF**, Heat Pump heating will be terminated when there is a demand for third stage heat.

Dual Fuel Balance Point (Setup Step 54) - (5° - 60°) Specifies the outdoor temperature at which the heat pump will cease operating and a fossil fuel source of heat is used.

Dual Fuel Changeover Delay (Setup Step 55) - (0 - 90) Specifies the number of seconds the heat pump is allowed to continue running after a fossil fuel heat source has been engaged.

Wired Sensor Use (setup step 39)

This feature allows the user to choose if the wired sensor will be used as an indoor or outdoor sensor.

Control To Temp Source (Setup Step 40)

This feature allows the user to specify which temperature sensor source the thermostat will use to measure room temperature. **Thermostat:** Uses the internal thermostat sensor only. **Remote Sensor:** Uses wireless or wired sensors only. **Average Of Remote Sensor And Thermostat:** Averages the temperatures of the remote sensor(s) and the thermostat. **NOTE:** If a remote sensor is being used, the degree icon on the large room temperature display will blink.

Fault Type (setup step 73)

This step allows the FAULT terminal on the thermostat to be configured for three different settings:

NONE - Scrolling display shows 'FAULT' when a fault signal is active.

COMFORT ALERT - Fault alerts are controlled by the Comfort Alert accessory and use the following codes:

- | | |
|--------------------------|------------------------|
| 1 - Long Run Time | 6 - Open Start Circuit |
| 2 - System Pressure Trip | 7 - Open Run Circuit |
| 3 - Short Cycling | 8 - Welded Contactor |
| 4 - Locked Rotor | 9 - Low Voltage |
| 5 - Open Circuit | |

For installation instructions of the Comfort Alert accessory, please refer to the Comfort Alert Installation Manual.

Installer Setup

Auxiliary Output

This thermostat is equipped with a programmable auxiliary output. This output can be configured to be controlled from a variety of sources.

Aux Output Polarity (Setup Step 58) - Specifies if the Auxiliary output will be **Open (Normally Open)** or **Closed (Normally Closed)**.

Aux Output (Setup Step 59) - Specifies which source will control the Aux output.
Choices are:

Time - Uses the internal clock of the thermostat.

Temp - Uses one of three temperature sources.

External - The Auxiliary Output is controlled from an external accessory source, like Comfort Call.

Error - Uses the thermostat's error processing to signal an active error condition.

Free Cooling - Drives a damper to bring fresh air in from outdoors.

Venting - Drives a damper to exhaust inside air to the outside.

Auxiliary Output Programming By Time

If **TIME** is selected for the Aux Output, the following setup steps will appear:

Aux Output Days (Setup Step 60) - Specifies if the Aux Output will be single day (1 DAY), weekday/weekend (5/2 DAY), or seven day (7 DAY) programmable.

Day Of Week To Program (Setup Step 61) - Specifies which day of the week to program.

Aux Output Start Time (Setup Step 62) - Specifies the time of each day when the Aux output will turn on.

Aux Output Stop Time (Setup Step 63) - Specifies the time of each day when the Aux output will turn off.

Copy (Setup Step 64) - This step only appears if Aux Output Days (Setup Step 60) is set for 7 programmable output days.

Installer Setup

Auxiliary Output Programming By Temp

If TEMP is selected for the Aux Output, the following setup steps will appear:

Aux Output Temp Source (Setup Step 65) - Specifies what temperature source will be monitored for controlling the programmable output. The options are:

Thermostat - Temperature is monitored from the thermostat sensor.

Outdoor Sensor - Temperature is monitored from the Outdoor temperature sensor.

Wired Remote - Temperature is monitored from a wired sensor connected to the Remote Sensor terminals.

External - The Auxiliary Output is controlled from an external accessory source.

Aux Output Trigger Point Temp (Setup Step 66) - Specifies the temperature from the above selected source above which the Aux Output is triggered. A non-adjustable two degree deadband is applied to avoid frequent triggering. The 'N.O.' (Normally Open) or 'N.C.' (Normally Closed) function (Setup Step 58) can be altered to make the output trigger below the set temperature. Temps are adjustable from 0 - 120 degrees Fahrenheit.

Aux Output Error Level (Setup Step 67) - When the Aux Output is set for ERROR, three choices of error levels exist:

Level 1 - Aux Output is active if a Critical, Alarm, or Alert error is present.

Level 2 - Aux Output is active if a Critical or Alarm error is present.

Level 3 - Aux Output is active only if a Critical error is present.

Critical Error - Service or immediate attention is required.

Alarm Error - Service or immediate attention is recommended.

Alert Error - Runtimes, Low Battery on wireless remote sensors, etc.

Press Fan To Clear All Messages (setup step 76)

This feature allows the user to clear all current error messages from the display.

Installer Setup

Free Cooling (Setup Steps 68 - 69) To use Free Cooling, Setup Step 59 must be set to 'FREE COOLING'.

Free Cooling is an energy saving way to boost the efficiency of your air conditioning system by bringing in fresh air from the outside. The installation of a Free Cooling damper and outdoor temperature sensor may also be required.

Free Cooling With A/C (Setup Step 68) - When the Aux Output is being used for Free Cooling and an air conditioning system is present, set this step to **ON**. Fresh, outside air may be used for first stage cooling in place of your air conditioner. If your system does not have an air conditioner installed, set this step to **OFF**. This will enable all stages of cooling to use only the Free Cooling damper.

Free Cooling Usable Temp (Setup Step 69) - This step allows the user to specify the outdoor temperature below which Free Cooling can be utilized. For example, if this step is set for 65 degrees, Free Cooling will be used until the outdoor temp rises above 65. Temps are adjustable from 40 to 80 degrees Fahrenheit.

Venting To use Venting, Setup Step 59 must be set to 'VENTING'.

The Venting feature allows your HVAC system to exhaust air from inside to the outside, when there is a cooling call. Press FAN twice to activate Venting. While Venting is active, heating and cooling are disabled. The installation of a Venting damper will be required.

Dry Contact Operation (setup step 71 - 72)

Dry Contact Polarity (Setup Step 71)

Open (Normally Open) - The dry contact is open until the connected device closes the circuit.



'Idle'



'Active'

Closed (Normally Closed) - The dry contact is closed until the connected device opens the circuit.



'Idle'



'Active'

Dry Contact Use (Setup Step 72)

PAN - If PAN is selected when the dry contact is active, the thermostat will lockout the compressor terminal(s) and "SERVICE DRAIN PAN" will appear on the display.

VACATION - If VACATION is selected when the dry contact is active, the thermostat will be forced into Vacation Mode.

Installer Setup

Resetting the Thermostat to the Factory Default Settings (for default values see page 34)


If, for any reason, you desire to return all the stored settings back to the factory default settings, follow the instructions below.

WARNING: This will reset all Time Period and Advanced Programming to the default settings. Any information entered prior to this reset may be permanently lost.

- 1 Press and hold SETUP for 5 seconds. All icons will appear on the display.




Keep pressing the SETUP button until you see this screen.

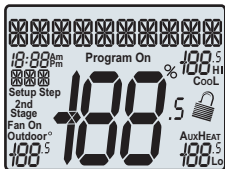

- 2 After all the icons appear, release SETUP. Press and hold FAN for 5 seconds. DEFAULTS will appear on the display.



Keep pressing the FAN button until you see this screen.

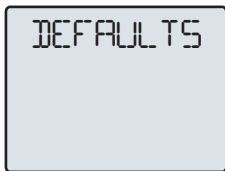


- 3 After DEFAULTS appears, release FAN. Press SETUP to return to normal operation.





Installer Setup

Locking/Unlocking the Keypad

To prevent unauthorized use of the thermostat, the front panel buttons may be disabled. To disable, or 'lock' the keypad, press and hold the MODE button. While holding the MODE button, press the UP and DOWN buttons together. The  icon will appear on the display, then release the buttons.

Press all three buttons in the order outlined above for keypad lockout



To **unlock** the keypad, press and hold the MODE button. While holding the MODE button, press the UP and DOWN buttons together. The  icon will disappear from the display, then release the buttons.


Technician Setup

To enter Technician Setup, press and hold the **SETUP** button for 5 seconds. After all the icons appear, press **MODE**. The version number of the thermostat will appear in the scrolling text. Press **MODE** to advance to the next step. Use the **UP** or **DOWN** buttons to adjust the value of your selection. To leave Technician Setup, press **SETUP**.

Hold for 5 seconds



All icons appear

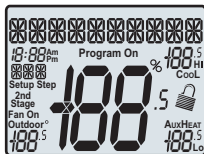

Press **MODE** to advance through the setup steps



Press **UP** or **DOWN** to adjust the selection



Technician Setup is for diagnostic and testing purposes and is intended for use by a qualified technician. See page 14 for more detailed instructions.

Technician Setup contains the following options:

- View the version number of the thermostat.
- View the jumper setting of **J1** (Gas/Electric or Heat Pump), **J2** (Reversing Valve: RV=O or RV=B), and **J3** (Fan: Gas or Electric) jumpers located on the back of the thermostat. (Remove thermostat from backplate for access)
- View the state of the Dry Contact and Fault terminals.
- Turn on equipment outputs for testing.
- Calibrate thermostat, remote, and humidity sensors.
- Control HUM output (On or Off)
- Control DEHUM output (On or Off)
- Control AUX output (On or Off)

Advanced Setup Table

Df = Factory Default Setting

| Step# | Description | Pg# | Range | Df |
|-------|---------------------------------------|-----|--|---------------------------|
| 1 | Prog Mode | 21 | Non,1,5/2,7 | 7 |
| 2 | Available Modes | 21 | Heat/Cool/Auto/Off, Heat/Cool/Off,Heat/Off, Cool/Off | Heat/Cool/ Auto/Off |
| 3 | Backlight | 15 | On,Off,6pm-6am | Off |
| 4 | Backlight Level | 15 | Off-7 levels of brightness | Level 5 |
| 5 | Current Service Filter Runtime Hours | 18 | 0-1999 | 0 |
| 6 | Current Service Filter Calendar Days | 18 | 0-1999 | 0 |
| 7 | Current Heat Runtime Hours | 19 | 0-1999 | 0 |
| 8 | Current Aux Heat Runtime Hours | 19 | 0-1999 | 0 |
| 9 | Current Cool Runtime Hours | 19 | 0-1999 | 0 |
| 10 | Current UV Lamp Calendar Days | 19 | 0-1999 | 0 |
| 11 | Current Humidifier Calendar Days | 19 | 0-1999 | 0 |
| 12 | Set Service Filter Runtime Hours | 18 | 0-1950 | 0 |
| 13 | Set Service Filter Calendar Days | 18 | 0-720 | 0 |
| 14 | Set UV Lamp Calendar Days | 19 | 0-720 | 0 |
| 15 | Set Humidifier Calendar Days | 19 | 0-720 | 0 |
| 16 | Language | 15 | English,Espanol,Francais | English |
| 17 | Scrolling Method | 16 | L-R Slow,L-R Fast,Word L-R Slow,Word L-R Fast, Whole Word L Slow, Whole Word L Fast, Whole Word Ctr Slow, Whole Word Ctr Fast | Whole Word Ctr Fast |
| 18 | Setpoint Limits | 22 | No,Use | No |
| 19 | Max Heat Setpoint | 22 | 35°-99° | 74° |
| 20 | Min Cool Setpoint | 22 | 35°-99° | 70° |
| 21 | Cycles Per Hour | 22 | No Limit,2,3,4,5,6 | 6 |
| 22 | Compressor Minimum Off Minutes | 22 | 0,3,5 | 5 |
| 23 | Minimum Heat/Cool Setpoint Difference | 22 | 0°-6° | 2° |
| 24 | Number Of Compressor Stages | 22 | 1,2 | 1 |
| 25 | 1st Stage Deadband | 23 | 1°-6° | 2° |
| 26 | 2nd Stage Deadband | 23 | 0°-10° | 2° |
| 27 | 3rd Stage Deadband | 23 | 0°-10° | 2° |
| 28 | 4th Stage Deadband | 23 | 0°-10° | 2° |
| 29 | Minutes Between 1st and 2nd Stage | 23 | 0-60 | 2 |
| 30 | Minutes Between 2nd and 3rd Stage | 23 | 0-60 | 2 |
| 31 | Minutes Between 3rd and 4th Stage | 23 | 0-60 | 2 |
| 32 | 2nd Stage Turnoff Point | 23 | Deadband,Setpoint | Deadband |
| 33 | 3rd Stage Turnoff Point | 23 | Deadband,Setpoint | Deadband |

Advanced Setup Table

Df = Factory Default Setting

| Step# | Description | Pg# | Range | Df |
|-------|---------------------------------------|-----|---|----------|
| 34 | 4th Stage Turnoff Point | 23 | Deadband,Setpoint | Deadband |
| 35 | Fan Program | 24 | On,Off | Off |
| 36 | Minutes of Fan Runtime Per Hour | 24 | 0-60 | 0 |
| 37 | Fan Program Start Time | 24 | 12am-12am | 7am |
| 38 | Fan Program Stop Time | 24 | 12am-12am | 9pm |
| 39 | Wired Sensor Use | 27 | Indoor,Outdoor | Outdoor |
| 40 | Control to Temp Source | 27 | Tstat,Remote,Average | Tstat |
| 41 | Humidity Only With Heat | 25 | On,Off | Off |
| 42 | Fan With Humidity Demand | 25 | Fan on,Fan off | Fan Off |
| 44 | Cool To Dehumidify | 25 | Off,On | Off |
| 45 | Maximum Dehum Overcool | 25 | 0°-5° | 2° |
| 46 | Reheat Operation W/Cool To Dehumidify | 25 | On,Off | Off |
| 47 | Lockout Heat Pump W/Outdoor Temp | 26 | On,Off | Off |
| 48 | Heat Pump Lockout Temp | 26 | 0°-75° | 35° |
| 49 | Lockout Aux Heat W/Outdoor Temp | 26 | On,Off | Off |
| 50 | Aux Heat Lockout Temp | 26 | 20°-75° | 75° |
| 51 | Dual Fuel | 26 | On,Off | Off |
| 53 | Dual Fuel Changeover On Outdoor Temp | 27 | On,Off | On |
| 54 | Dual Fuel Balance Point | 27 | 5-60 | 35 |
| 55 | Dual Fuel Changeover Delay In Seconds | 27 | 0°-90° | 0° |
| 56 | Fan Off Delay In Seconds | 24 | 0,120 | 0 |
| 57 | F/C | 24 | Fahrenheit,Celsius | F |
| 58 | Aux Output Polarity | 28 | Open,Closed | Open |
| 59 | Aux Output | 28 | Time,Temp,Ext.,Error, Free Cooling,Venting | Time |
| 60 | Aux Output Program Days | 28 | 1,5/2,7 | 1 |
| 61 | Day Of Week To Program | 28 | M-M | MTWTFSS |
| 62 | Aux Output Start Time | 28 | 12a-12a | 7a |
| 63 | Aux Output Stop Time | 28 | 12a-12a | 9p |
| 64 | Copy | 28 | Yes,No | No |
| 65 | Aux Output Temp Source | 29 | Tstat,Outdoor, Wired Remote,External | Ctrl |
| 66 | Aux Output Trigger Point Temp | 29 | 0°-120° | 65° |
| 67 | Aux Output Error Level | 29 | 1-3 | 3 |
| 68 | Free Cooling With A/C | 30 | Without A/C,With A/C | With A/C |
| 69 | Free Cooling Usable Temp | 30 | 40°-80° | 65° |
| 70 | Comfort Recovery | 24 | On,Off | Off |
| 71 | Dry Contact Polarity | 30 | Open,Closed | Open |
| 72 | Dry Contact Use | 30 | Pan,Vacation | Vacation |

Advanced Setup Table

Df = Factory Default Setting

| Step# | Description | Pg# | Range | Df |
|-------|---------------------------------|-----|---------------------|------|
| 73 | Fault Type | 27 | None, Comfort Alert | None |
| 74 | Humidity Polarity | 25 | Open, Closed | Open |
| 75 | Dehumidify Polarity | 25 | Open, Closed | Open |
| 76 | Press Fan To Clear All Messages | 29 | N/A | N/A |

TroubleShooting

- **SYMPTOM:** The air conditioning does not attempt to turn on.
CAUSE: The compressor timer lockout may prevent the air conditioner from turning on for a period of time.
REMEDY: Consult the Owner's Manual in the Installer Setup section to defeat the Cycles Per Hour (page 22).
- **SYMPTOM:** The display is blank.
CAUSE: Lack of proper power.
REMEDY: Make sure the power is on to the furnace and that you have 24vac between **R & C**.
- **SYMPTOM:** The air conditioning does not attempt to turn on.
CAUSE: The cooling setpoint is set too high.
REMEDY: Lower the cooling setpoint or lower the cooling setpoint limit. See Setpoint Limits (page 22).
- **SYMPTOM:** The heating does not attempt to turn on.
CAUSE: The heating setpoint is set too low.
REMEDY: Raise the heating setpoint or raise the heating setpoint limit. See Setpoint Limits (page 22).
- **SYMPTOM:** When controlling a residential heat pump, and asking for cooling, the heat comes on.
CAUSE: The thermostat reversing valve jumper is set for “**B**”.
REMEDY: Set the reversing valve jumper for “**O**”.
- **SYMPTOM:** When calling for cooling, both the heat and cool come on.
CAUSE: The thermostat equipment jumper is configured for “**HP**” and the HVAC unit is a Gas/Electric.
REMEDY: Set the equipment jumper for “**Gas**”.
- **SYMPTOM:** When the Program button is pressed, the display reads “**DISABLED**”.
CAUSE: Program mode is set to “**NON PROGRAM**”.
REMEDY: Set Program Mode (Setup 1) to **1, 5/2, or 7 Day**. See Selecting Your Program Mode (page 21).

Index



Alerts

see *Runtime*

Accessory, 17

Auto

adjust temperature, 6
changeover, 21
fan, 6
mode, 5, 21

AuxHeat icon, 4

Aux Heat Lockout, 26

Auxiliary Output, 28, 29

Average

thermostat sensor, 27



b reversing valve, 10,
33

Backplate, 9

Balance Point, 27

Buttons

accessory, 1, 17
down (cooler) 1, 5

display, 1, 16
emergency heat, 1, 17
fan, 1, 6,
front panel, 1
humidity, 1, 6
mode, 1, 5
outdoor, 1, 6
program, 1, 20
set clock, 1, 5
setup, 1, 15, 21
vacation, 1, 17
up (warmer), 1, 5



Calibration, 33

Celsius, 24

Clock

display, 2
setting, 5

Comfort Recovery, 24

Compressor Lockout, 22

Cool

1st stage
deadband, see
Deadband
dehum, 25
minutes of run-
time, 23

2nd stage

deadband, see
Deadband
dehum, 25
minutes of run-
time, 23
turn off
temperature,
23

deadband, see

Deadband

droop, see *Deadband*
electric/heat pump,
10

icon, 2

indicator, 1

mode, 2, 5

overcool, see

Overcool

program, see *Program*

runtime, see *Runtime*

setpoint, 3, 6, 20

to dehumidify, see

Dehumidify

Condensate Drain Pan, 30

Copy Function

see *Program*

Cycles Per Hour, 22

Index



Day

programming, 20
setting, 20

Deadband

balance point, 23
1st stage, 23
2nd stage, 23
3rd stage, 23

Dehumidify

Aux icon, 2
cool to, 25
dehum settings, 25
setpoint, 25

Delay

fan-off, *see Fan*
time between stages,
see Time Delay

Differential

heat and cool, 22

Disabled Keypad

see Keypad Lockout

Drain Pan Overflow

Alarm, *see Dry Contact*

Dry Contact

operation, 30
polarity, 30
service pan, 30
vacation, 17, 30

Dual Fuel

changeover balance
point, 27
control two heat
sources, 26
operation, 26
outdoor sensor,
6, 27



EH, 33

Electric Heating

AuxHeat icon, 4
jumper setting, 10
reheat, 25

Emergency Heat,

17

Energy Watch

cool, 19
heat, 19



Factory Defaults

caution, i
settings, 34, 35, 36
resetting, 31

Fahrenheit, 24

Fan

button function, *see*
Buttons
off time delay, 24
on during heat, *see*
Electric Heat
on icon, 4
program, *see*
Programmable Fan
runtime, 18
2nd stage heat, *see*
Emergency Heat
speed, *see Dehumidify*
with humidity, 25

Fault, 27

Free Cooling, 30



Gas/Electric Furnace

jumper, 10

Green Indicator, I



Heat

1st stage

deadband, see

Deadband

emergency heat,
17

minutes of run-
time, 23

2nd stage

deadband, see

Deadband

emergency heat,
17

electric strip heat,
17

minutes of run-
time, 23

3rd stage

deadband, see

Deadband

4th stage

deadband, see

Deadband

AuxHeat icon, 4

deadband, see

Deadband

droop, see *Deadband*
electric/heat pump,

icon, 2

indicator, 1

mode, 2, 5

program, see

Program

runtime, see *Run-
Time*

setpoint, 6, 20

Heat Pump

AuxHeat, 12, 13, 26

AUXHeat Lockout
26

emergency heat,
17

heat pump Lockout
26

jumper setting, 10

multi-stage, 12, 22

Hi

icon, 4

temperature, 6

Humidify

service, 19

setpoint, 25

with Fan, 25



Icon, 2



Jumpers

ELEC, 10

electric heat, 10

gas electric, 10

heat pump, 10

reversing valve, 10

viewing, 33



Keypad Lockout, 32



LCD, 1

Locked Indication,

see *Keypad Lockout*

Lo

icon, 4
temperature, 6



Manual

changeover, 21
cool, 21
heat, 21

Maximum Outdoor Temperature, see *Hi*

Minimum Outdoor Temperature,
see *Lo*

Mode, 2, 5, 21

Multi-stage Operation, 23



Non-Programmable Thermostat, 21

Normally Open/Closed,
dry contact, 30

programmable
output, 28
dehum terminal,
25



O Reversing Valve
see *Reversing Valve*

Off Mode, 2, 5

Outdoor
button, see *Buttons*
icon, 1
sensor, 6
viewing
temperature, 6

Overcool, 25



Pan, Service
see *Dry Contact*

Polarity, see *Dry Contact*
Program
Copy, 20, 28

daily schedule, 20
mode, 21
worksheet, back page

Programmable Fan
24

Auxiliary Output
external control, 28
error, 28
temperature-based
control, 28, 29
time-based control,
28

Programmable Thermostat, 21

Programming a Daily Schedule, 20



Reheat
during cool to
dehumidify, 25
electric heating, 25
function, 25

Remote Sensor

- averaging with Thermostat, 27
- calibrate, 14, 33
- control to, 27
- outdoor temperature, see *Outdoor*
- read to, 6
- viewing, 6

Reset

- thermostat settings, see *Factory Defaults*
- runtime
 - fan/filter, 18
 - humidify, 19
 - UV light, 19

Reversing Valve, 10

Runtime

- resetting, see *Reset* setting,
 - humidifier, 19
 - service filter, 18
- UV light, 19
- viewing,
 - cool, 19
 - heat, 19
 - humidification, 19

UV lamp, 19



Schedule

Daily, see *Program*

2nd stage turn off temperature, 23

Sensor

- outdoor, see *Outdoor*
- remote, see *Remote*
- thermostat, see *Thermostat*

Service

- filter icon, see *Reset*
- humidify icon, see *Reset*
- pan icon, see *Dry Contact*
- UV light, see *Reset*

Set Clock, see *Clock*

Setpoint

- Auxiliary Output, 28
- balance point, 27
- cool, see *Cool*
- dehumidification, 25
- heat, see *Heat*
- vacation, 17
- humidification, 25

Simplest Operation, 5



Technician Setup, 14, 33

Terminal, MISC, see *MISC*

Thermostat Sensor

- averaging, 27
- calibrate, 14, 33

Three Stage Heat, 11, 12, 13, 23

Time, see *Clock*

Time Delay,

- compressor lockout, 22
- cycles per hour, 22
- 1st to 2nd stage, 23
- 2nd to 3rd stage, 23
- 3rd to 4th stage, 23

Time Schedule, see *Program*



UV Light

- resetting, 19
- runtime, see *Runtime*
- setting, see *Runtime*



Vacation,

- button, see *Buttons*
- mode, 17
- programming, 17
- setpoints, 17

Venting, 30



W3, see *Jumpers*

Warranty, 44



Y2, see *Jumpers*

Warranty

Five-Year Warranty - This Product is warranted to be free from defects in material and workmanship. If it appears within five years from the date of original installation, whether or not actual use begins on that date, that the product does not meet this warranty, a new or remanufactured part, at the manufacturer's sole option to replace any defective part, will be provided without charge for the part itself provided the defective part is returned to the distributor through a qualified servicing dealer.

THIS WARRANTY DOES NOT INCLUDE LABOR OR OTHER COSTS incurred for diagnosing, repairing, removing, installing, shipping, servicing or handling of either defective parts or replacement parts. Such costs may be covered by a separate warranty provided by the installer.

THIS WARRANTY APPLIES ONLY TO PRODUCTS IN THEIR ORIGINAL INSTALLATION LOCATION AND BECOMES VOID UPON REINSTALLATION.

LIMITATIONS OF WARRANTIES – ALL IMPLIED WARRANTIES (INCLUDING IMPLIED WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE AND MERCHANTABILITY) ARE HEREBY LIMITED IN DURATION TO THE PERIOD FOR WHICH THE LIMITED WARRANTY IS GIVEN. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE MAY NOT APPLY TO YOU. THE EXPRESSED WARRANTIES MADE IN THIS WARRANTY ARE EXCLUSIVE AND MAY NOT BE ALTERED, ENLARGED, OR CHANGED BY ANY DISTRIBUTOR, DEALER, OR OTHER PERSON WHATSOEVER.

ALL WORK UNDER THE TERMS OF THIS WARRANTY SHALL BE PERFORMED DURING NORMAL WORKING HOURS. ALL REPLACEMENT PARTS, WHETHER NEW OR REMANUFACTURED, ASSUME AS THEIR WARRANTY PERIOD ONLY THE REMAINING TIME PERIOD OF THIS WARRANTY.

THE MANUFACTURER WILL NOT BE RESPONSIBLE FOR:

1. Normal maintenance as outlined in the installation and servicing instructions or owner's manual, including filter cleaning and/or replacement and lubrication.
2. Damage or repairs required as a consequence of faulty installation, misapplication, abuse, improper servicing, unauthorized alteration or improper operation.
3. Failure to start due to voltage conditions, blown fuses, open circuit breakers or other damages due to the inadequacy or interruption of electrical service.
4. Damage as a result of floods, winds, fires, lightning, accidents, corrosive environments or other conditions beyond the control of the Manufacturer.
5. Parts not supplied or designated by the Manufacturer, or damages resulting from their use.
6. Manufacturer products installed outside the continental U.S.A., Alaska, Hawaii, and Canada.
7. Electricity or fuel costs or increases in electricity or fuel costs for any reason whatsoever including additional or unusual use of supplemental electric heat.
8. ANY SPECIAL INDIRECT OR CONSEQUENTIAL PROPERTY OR COMMERCIAL DAMAGE OF ANY NATURE WHATSOEVER. Some states do not allow the exclusion of incidental or consequential damages, so the above may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.

Notes:

Notes:

| DAY | PERIOD | START TIME | COOL | HEAT | |
|---|---------|------------|------|------|------------------------------|
| M O N D A Y | Morning | | | | |
| | Day | | | | |
| | Evening | | | | |
| | Night | | | | |
| T U E S D A Y | Morning | | | | <i>Copy Mon → Tue</i> |
| | Day | | | | <input type="checkbox"/> No |
| | Evening | | | | <input type="checkbox"/> Yes |
| | Night | | | | |
| W E D N E S D A Y | Morning | | | | <i>Copy Tue → Wed</i> |
| | Day | | | | <input type="checkbox"/> No |
| | Evening | | | | <input type="checkbox"/> Yes |
| | Night | | | | |
| T H U R S D A Y | Morning | | | | <i>Copy Wed → Thu</i> |
| | Day | | | | <input type="checkbox"/> No |
| | Evening | | | | <input type="checkbox"/> Yes |
| | Night | | | | |
| F R I D A Y | Morning | | | | <i>Copy Thu → Fri</i> |
| | Day | | | | <input type="checkbox"/> No |
| | Evening | | | | <input type="checkbox"/> Yes |
| | Night | | | | |
| S A T U R D A Y | Morning | | | | <i>Copy Fri → Sat</i> |
| | Day | | | | <input type="checkbox"/> No |
| | Evening | | | | <input type="checkbox"/> Yes |
| | Night | | | | |
| S U N D A Y | Morning | | | | <i>Copy Sat → Sun</i> |
| | Day | | | | <input type="checkbox"/> No |
| | Evening | | | | <input type="checkbox"/> Yes |
| | Night | | | | |

